

★ SUPERCHARGE®

BATTERIES

MORE POWER. LONGER LIFE



ENGINE
START
STOP

BRT-12

CONFIGURATION TOOL

USER GUIDE

BATTERY REPLACEMENT SIMPLIFIED

PRODUCT DETAILS

Modern battery management systems used in today's vehicles require their systems to be reconfigured each time a battery is fitted, the BRT-12 allows you to reconfigure the stored battery data on these modern vehicles.

The BRT-12 lets you enter the new battery information quickly and simply, it can also display the current battery's details.

Features

- High contrast easy to read OLED graphics display.
- PC Updateable via USB and Internet.
- Simple operation using just 6 buttons.
- Powered from the vehicle's 12 Volt J1962 diagnostic socket.
- Handheld design with ruggedized rubber elastomer boot.

Please read this information carefully before using your new Battery Replacement Tool

Always ensure you have the latest version of software and vehicle data that is available. Follow the instructions for Software

Please refer to this manual when using the tool and don't hesitate to contact your distributor if you experience any difficulty with it.

Specifications

- J1850 VPW / PWM
- ISO High & Low Speed
- CAN
- Fault Tolerant CAN

FIRST TIME USE

- When the Battery Replacement Tool is first powered you have to select the language you want to use the tool in. This screen only appears on the first power up of the tool, although you are able to go in and alter this at any time.
- Ensure the battery is able to supply a minimum voltage to enable you to operate the tool.
- Ensure Ignition key is in the position "lock"
- Connect the **Battery Replacement Tool** to a vehicle using the 16 Pin Diagnostic plug to any vehicle with a 16 Pin diagnostic socket.
- The tool will take you to the Main Menu screen.
- If you are coding this vehicle refer to the **Coding a Battery to a vehicle** section otherwise ensure the ignition is switched off on the vehicle and unplug the tool from the diagnostic socket.



SAFETY INFORMATION

- **Always wear eye protection when handling batteries.**
- **Keep batteries away from children.**
- **No smoking, avoid open flames or creating sparks near batteries.**
- **Explosion hazard. Batteries emit an explosive mixture of hydrogen and oxygen during and after charging.**
- **Corrosive hazard. Wear protective equipment to shield eyes, hands, and clothing.**

LCD Display Screen

This is the Main screen for the tool. From here you can select the vehicle, change the language and view the information screen.



Select this icon to start the Replace Battery process.



Select this icon to choose and set the different languages.



Information screen.



USB Connector

The mini USB connector is used to connect to a PC to allow you to update the tool with additional software.

Navigation buttons

- The arrow keys are used to navigate through the menus.
- The OK button is used to confirm a selection.
- The ESC button is used to go back to the previous screen.

16 Pin J1962 Diagnostic plug

The J1962 connector needs to be connected to the vehicle's OBD socket in order to get power and make communications with the particular vehicle.

CODING A BATTERY TO A VEHICLE

Now you are ready to start using the Battery Configuration Tool to configure the battery to the vehicle and diagnose faults on the range of cars covered.

01



- First replace the old battery with the new one, ensuring the key is not in the ignition.
- Connect the Battery Replacement Tool to a vehicle using the 16 Pin Diagnostic plug.
- The tool will take you to the Main Menu screen.
- Using the keypad, navigate to the battery replacement option and press OK.

02



- Using the keypad to navigate up and down the menus you will be given the following options:
- Select the Manufacturer. You will then be asked to switch the Ignition On
 - Select the Function. Select Validate Battery
 - Follow on screen instructions

03



- Select Validate Battery.
- Follow on screen instructions
- The system will register a new battery to the vehicle
- You will be informed if battery validation was concluded successfully.

CHANGING THE PRESET LANGUAGE

If you want to change the language the tool displays, you can select this option and choose the language you wish to use. This will then be stored in memory until you change it again.

01



- Using the keypad, navigate to the Language Icon and press OK.


02



- Select the required language.
- The system will register and remember your selection.
- The selected language will now be the default language used.


INFORMATION SCREEN

01

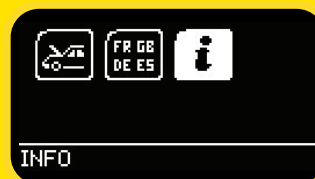

Using the keypad, navigate to the Information Icon and press OK.

02

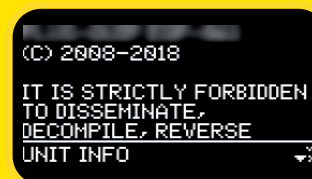

The information screen is displayed with a warning along with the serial number of the unit and the product identification number.

03



You may be asked to navigate to this screen by technical support to establish the serial number of your handset.

SOFTWARE UPDATE

Overview:

Software updates are done through an update suite that is available to download from the BRT-12 website.

Australia: <https://www.supercharge.com.au/resources/accessories/>

New Zealand: <http://www.superchargebatteries.co.nz/dealernet/index.htm>

Download and install the application suite using the application suite user guide for help if required. Once the suite is installed you simply need to follow the steps shown on screen to update the handset to the latest software.

Minimum requirements:

Windows PC running Windows XP/Vista/7/8

5MB of free disk space

Free USB port

TECHNICAL SPECIFICATION

Dimensions (without cables):	133mm x 78mm x 38mm
Cable Length:	1.10m
Weight (with cables):	285g
Supply Voltage:	8-18Vdc
Current Draw:	Vehicle supply - up to 0.15A USB PC Connection - <100mA
Operating Temperature Range:	0°C to 40°C
Storage Temperature Range:	0°C to 50°C
IP Rating:	IP20
Maximum Operating Humidity:	85% non-condensing
Note: the unit must not be operated in wet conditions	

COPYRIGHT AND WARRANTY

Copyright:

BRT-12 tool is made by SP Diagnostics and it is strictly forbidden to disseminate, decompile, reverse engineer or disassemble any part of the hardware or software incorporated within it or associated with it and is protected by international law.

Warranty:

This tool is warranted to be free of defects in materials and workmanship for a period of two years from the date of purchase. RAMCAR and the manufacturer will, at our option, repair the unit or replace the unit with a remanufactured tool. This limited warranty applies only to BRT-12 tool and does not cover any other equipment, static damage, water damage, overvoltage, dropping unit or damage resulting from extraneous causes including owner misuse. RAMCAR and the manufacturer are not liable for any incidental or consequential damages for breach of this warranty. The warranty is void if owner attempts to disassemble the unit or modify the cable assembly.

AUSTRALIA

1300 737 244 | www.supercharge.com.au

NEW ZEALAND

0800 188 122 | www.superchargebatteries.co.nz